

How to remove the broke helical coil

Prepare an extractor according to the size.



Screw the extractor into the shank. Reverse the extractor from time to time.



Pull out the extractor and the head of the broken helical coil comes out. Then use pliers to pull out the broken helical coil from the shank.

DO NOT TOUCH THE COIL WITH HANDS!



Check that no pieces of the broken helical coil remains in the shank.



How to insert a new helical coil

Mount the helical coil on the layer as shown in the picture.



Screw the helical coil into the shank without using too much force.



Insert the helical coil deep into the shank.



The helical coil fully inserted.

